
GB


SIAMP

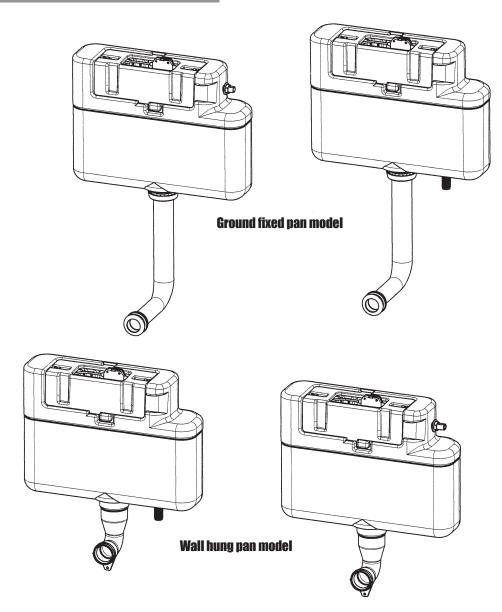


CISTERN FOR FURNITURE AND BACK TO WALL **INTRA**

ASSEMBLY INSTRUCTION


GROUND FIXED PAN MODEL

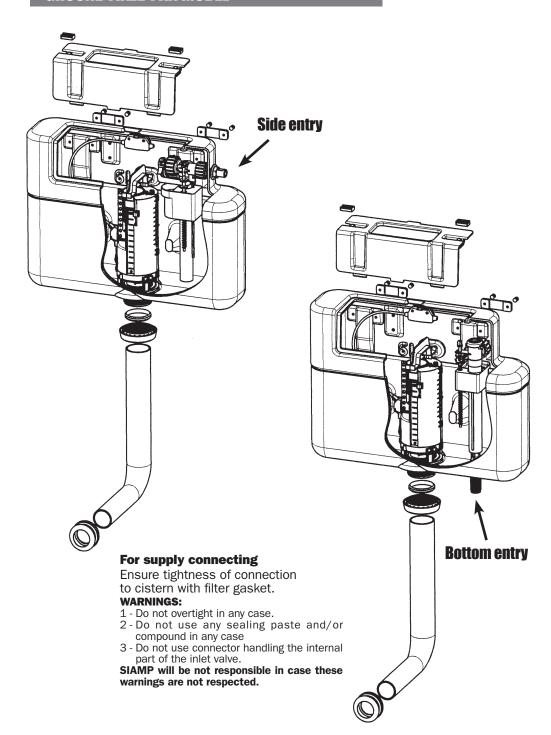


I - ATTACHING THE CISTERN

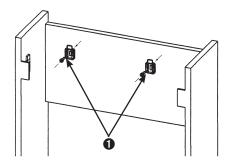


- 1 Attach the cistern attachment lugs
- 2 Position the cistern

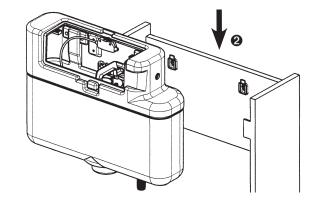


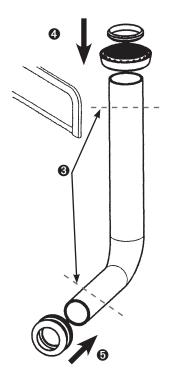


- Adjust the supply sleeve to the position of the toilet bowl (height and length)
- 4 Fit the supply sleeve nut and the seal
- 6 Position the toilet bowl seal
- 6 Insert the supply sleeve in the cistern
- 7 Tighten the supply sleeve nut
- Connect the supply sleeve and the drain sleeve, reinstall the front of the cabinet and position the toilet bowl.

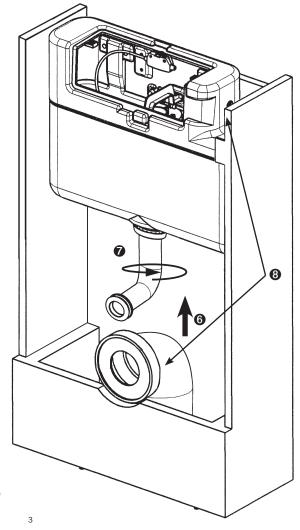


II - FLUSH BUTTON INSTALLATION

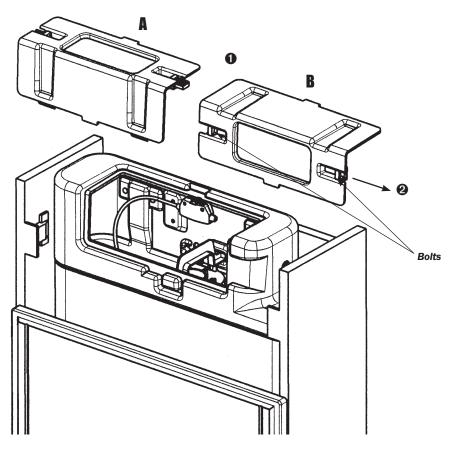


- Position the closing plate according to the type of control (top control (A) or front control (B))
- 2 Attach the plate with the bolts
- 3 Position the button:
 - place button on panel and screw button nut
 - clip cable case
 - Place panel back on top or front of furniture
- 4 Close the furniture or panel

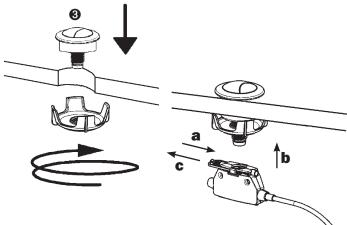


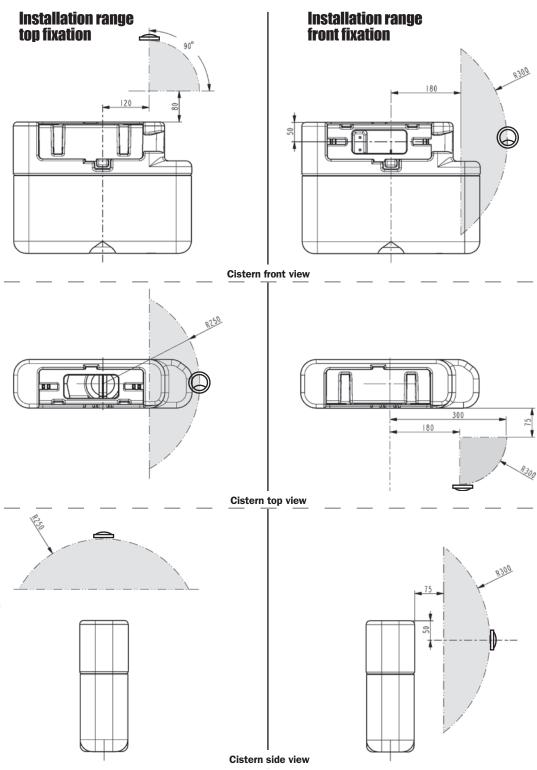


WALL HUNG PAN MODEL

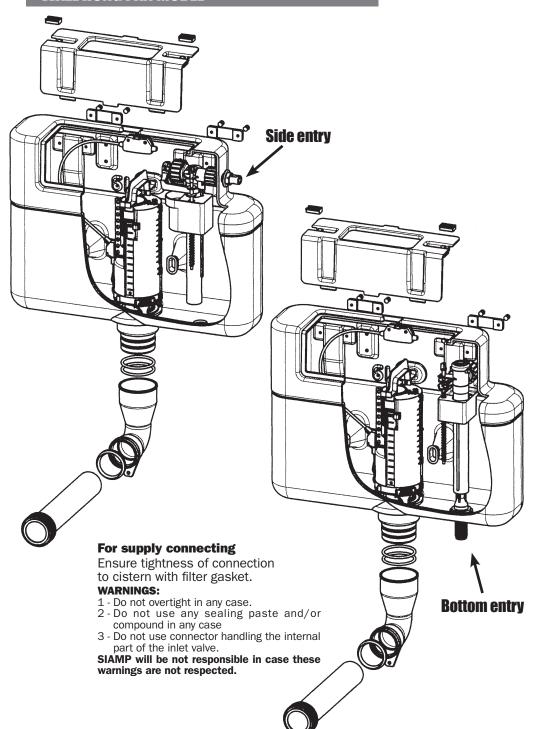


I - INSTALLING THE TOILET BOWL FRAME

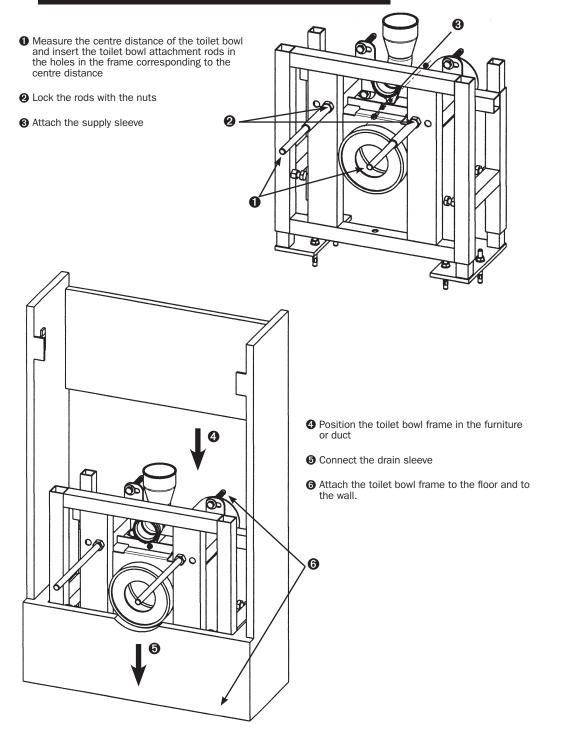


II - ATTACHING THE CISTERN

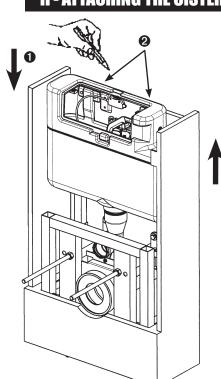


- Position the cistern temporarily on the supply sleeve
- 2 Mark the position of the cistern attachment lugs on the furniture
- 3 Remove the cistern
- Attach the cistern attachment lugs and insure they are level

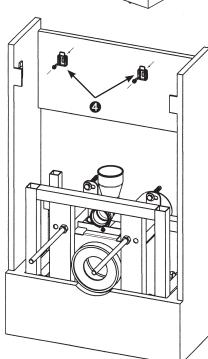

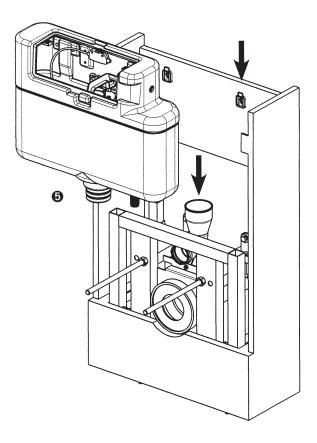

6 Position the cistern permanently.


III - TOILET BOWL CONNECTION

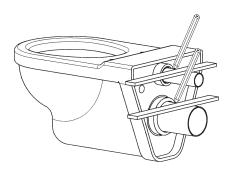


Using a rule placed as shown in the above drawing, draw a mark on the toilet bowl side, on the two sleeves.





Remove the sleeves from the toilet bowl and fit them to the frame. Using a rule placed as shown in the drawing above, make a mark on the wall side, on the two sleeves

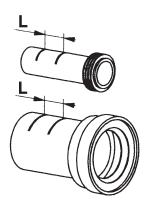


- 3 For each of the sleeves, measure the dimension (L) between the two marks.
- Transfer this dimension (L) by increasing by 3 mm at the end (frame side) the size obtained on each sleeve. For instance, if L = 50 mm, shorten the sleeve by 53 mm.
- **5** Cut the sleeves using a hack saw.
- 6 Deburr the cut pipes using a file

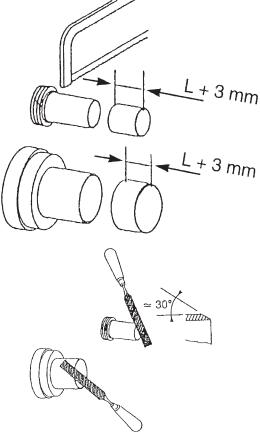


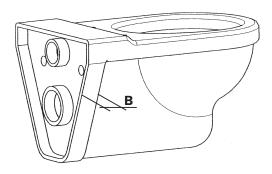





- If necessary, cut the attaching rods (I) so thatthe part protruding from the wall measures (B) + 20 mm
- Shorten the flexible sheaths (j) so that the part protruding from the wall measures (B) 15 mm

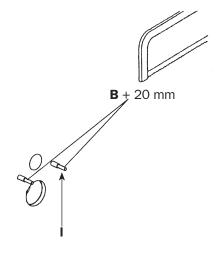

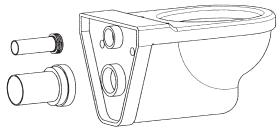




rods.






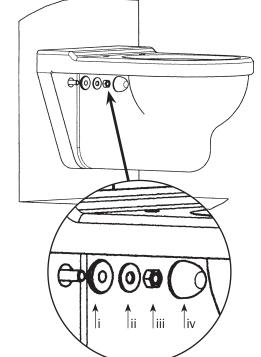


- When the toilet bowl is correctly positioned, attach it using the toilet bowl fixing kit complying with the part stacking order:
 - i = centering washer
 - ii = metal washer
 - iii = nut
 - iv = cover
- Connect the supply sleeve


IV - FLUSH BUTTON INSTALLATION

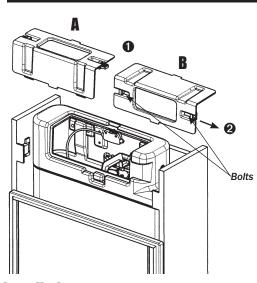


- Position the closing plate according to the type of control (top control (A) or front control (B))
- 2 Attach the plate with the bolts
- 3 Position the button:
 - place button and screw button nut
 - clip cable case
 - Place lid back on top or front of furniture
- 4 Close the furniture.

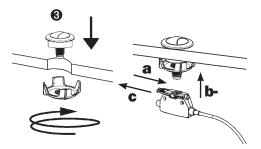


Installation range top fixation

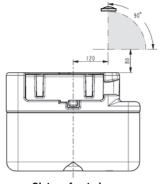


Cistern front view

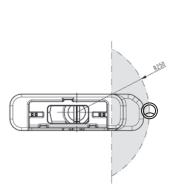


Cistern top view

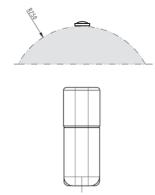


Cistern side view

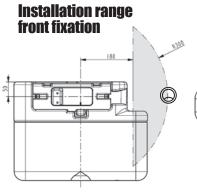

Cistern front view

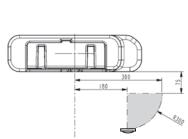

Cistern top view

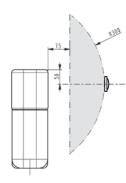

Cistern side view

You have just installed a concealed cistern for furniture and back to wall DUAL FLOW by SIAMP and we would like to thank you for your confidence in our products.

As expert in technical equipment and accessories for the toilet, SIAMP has taken every possible measure to apply all the necessary care to the design and production of this product, offering a ten-year guarantee except for rubber parts and manpower.

For any complementary information, or indicated claim, please contact:

Siamp UK

Siamp Ltd , Unit C2 , Meadowbank Business Park
Tweedale Way , Hollinwood , Oldham , Greater Manchester , OL9 8EH
Telephone : 0161 681 2120 / Fax : 0161 681 2130

info@siamp.co.uk / www.siamp.co.uk

