


OPTIMA 50

I - INSTALLATION


Position the mechanism in the cistern and secure it in place with the nut (g)

Manually screw the flush valve nut (g) until it is in contact with the ceramic. If necessary give an extra quarter turn (maximum) with the appropriate spanner.

NB : Excessive tightening can damage the mechanism and would not be covered by the guarantee.

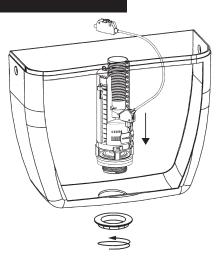


II - ASSEMBLING BOWL AND CISTERN

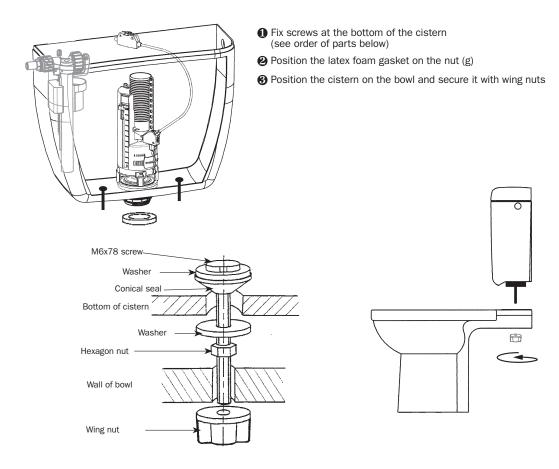


III - INSTALLATION OF BUTTON

- ① Once the set-up has been completed, place button (a) on lid and screw button nut (c), (if the hole in the lid (D) is > 38 mm and < 45 mm, remove the escutcheon (b))
- 2 Clip cable case
- Place lid back on top of cistern

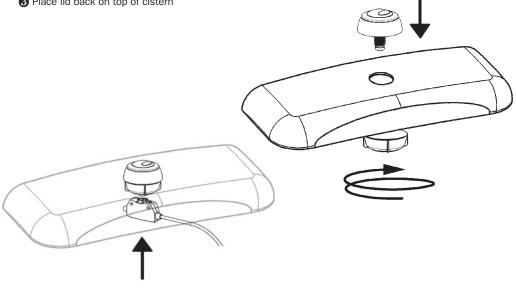

- MAINTENANCE

Changing the valve gasket

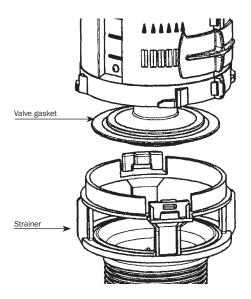


- After having opened the cistern, turn the mechanism 90° to separate it from its strainer
- Change the valve gasket
- **B** Reposition the mechanism, locking it into the strainer
- ④ Close the cistern again.

INSTALLING THE FLOAT VALVE

For 99B and 95L inlets, an approved single check valve or some other no less effective backflow prevention device shall be fitted at the point of connection(s) between the supply and the fitting.

ROBECO 06 and STANDARD 15E

- Position valve
- Pasten with nut
- Onnect to water supply
- Adjust water level with the adjustment screw (15 EL) or by bending the rod (06)

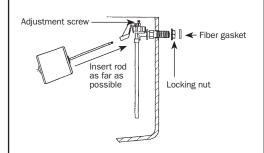


Manually screw the backnut until it is in contact with the ceramic. If necessary give an extra quarter turn (maximum). N.B.: Excessive tightening can damage the mechanism and would not be covered by the guarantee.

Ensure tightness of connection to cistern with filter gasket.

COMPACT 95L


- Position valve
- Pasten with nut
- Onnect to water supply
- Adjust water level with the adjustment screw

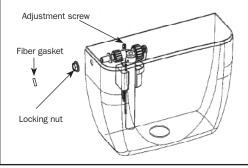

WARNINGS:

- 1 Do not overtight in any case.
- 2 Do not use any sealing paste and/or compound in any case

SIAMP will be not responsible in case these warnings are not respected.

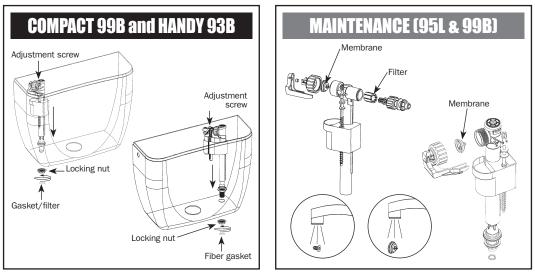

SIAMP 4, quai Antoine 1^{er} - BP 219 - MC 98007 MONACO Cedex Tél. 00 377 93 15 53 75 - Fax : 00 377 92 05 71 04 - E-mail: contact@siamp.com

> Siamp Ltd / Unit C2 / Meadowbank Business Park Tweedale Way / Hollinwood / Oldham / Greater Manchester / OL9 8EH Telephone : 0161 681 2120 / Fax : 0161 681 2130 / aftersales@siamp.co.uk